

Important Note



For best results, use VidaMount VESA brackets (from VidaBox) for this enclosure. It has been specifically fitted to work with this item.

Other VESA mounting hardware can only be used after carefully checking the VESA mount screw length (Step F). Too long a screw will crush and damage the iPad!

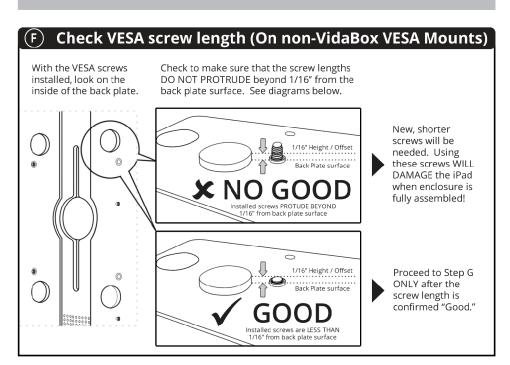

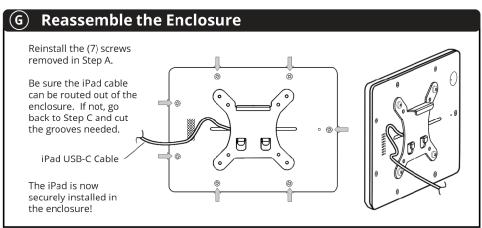




Plainview, NY 11803 USA

Toll-free US: (844) 4-KIOSKS Worldwide: +1 516-499-5050 Australia: +61 1300 44 VIDA EU/UK: +44 333 444 VIDA

INSTALLATION GUIDE

VidaMount VESA Enclosure Rear Camera Exposed: for iPad Air 11 M2, iPad Air 10.9 Gen 4|5, & iPad Pro 11 Gen 1|2|3|4 VB VESA IPRO2G110 RCE

Designed to securely enclose & expose the rear camera for iPad Pro 11" Gen 1|2|3|4, iPad Air 11 M2, & Air 10.9 Gen 4|5 tablets ONLY. Compatible with VESA 100x100 mounts

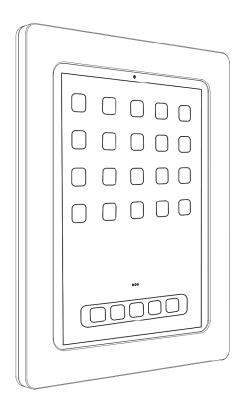

US Patent No. 20220205284 [iPad is shown for illustrative purposes & not included]

Installation Instructions

VidaMount VESA Enclosure w Rear Camera Exposed: iPad Pro 11 Gen 1 | 2 | 3 | 4, iPad Air 10.9 Gen 4 | 5, Air 11 M2


Important Note



For best results, use VidaMount VESA brackets (from VidaBox) for this enclosure. It has been specifically fitted to work with this item.

Other VESA mounting hardware can only be used after carefully checking the VESA mount screw length (Step F). Too long a screw will crush and damage the iPad!

Component Checklist

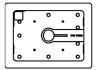

iPad Resin Enclosure (Already assembled)

TOOLS YOU'LL NEED (not included)



Phillips head Screwdriver




Knife / Box Cutter (OPTIONAL)

Disassembling the Enclosure

Remove the flat-head screws as shown. Set aside the loose hardware carefully.

We will need this hardware again ater.

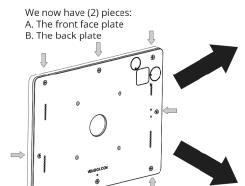



IMPORTANT: Diagrams are generalized for iPads your exact enclosure may appear slightly different!

iPad Resin Enclosure

REAR VIEW


A. FRONT FACE PLATE

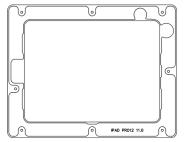

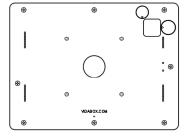

B. BACK PLATE

Optional: Remove Power Button Knockout (If needed)

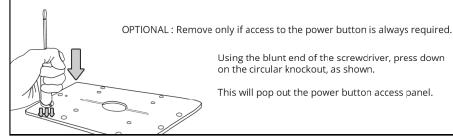

Using the blunt end of the screwdriver, press down on the circular knockout, as shown.

This will pop out the power button access panel.

Optional: Cut Wiring Grooves (If needed) Grooves OPTIONAL: Remove only if necessary. can be cut If using a VESA mount where the center wiring hole is blocked, use a knife / box cutter, and cut out the grooves. This will allow the tablet's Center wires to be routed properly. wiring hole

